

Colour Automation

Barcode Reader

Quick Start Guide

To prepare the barcode scanner to use with our tool please do the following steps.

Please print the guide out preferred on the laser printer to follow the configuration steps.

1. Connect scanner with the PC and wait until indication via sound and/or LED.

2. Scan "Start Configuration"

First you need to scan Start configuration in order to begin editing the barcode reader settings.

Start Configuration



3. Scan the barcode for your keyboard layout

Scan the keyboard layout language used in your country (barcode reader is recognized as keyboard).



<US English>



Swiss



UK English



Hungarian



Italian



Japanese



Spanish



Belgium



French



Portugal



Germany



Demark



Swedish



Holland


4. Scan the barcode for the correct output

CR



5. Scan the barcode for end of the configuration.

End Configuration

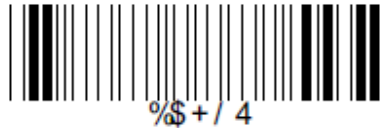

6. Scan the barcode for the saving configured parameters.

Save Parameters

Save the parameter settings
permanently.

